

12 x 40W Youth Rattlesnake Creative Effect Light

DMX AND CONTROL REFERENCE - EXCERPT

This edition contains the model-specific operation and DMX reference page from the associated product guide. The reference page is reproduced in its existing layout, with all stated mode and firmware limitations retained.

This is a control-reference excerpt, not a complete installation or operating manual. It does not specify an operating-temperature range, power connection rating or approved rigging design. Confirm those items for the supplied fixture before installation.

Match the console patch to the actual fixture mode. Modes shown as manual-listed or unverified remain subject to the confirmation notes printed on the following page.

2. Operation, Menu and DMX Modes

MENU selects a function, UP/DOWN changes parameters and ENTER confirms. The current XML, D4 and R20 files verify 26CH. Manuals also list 38CH, 62CH, 74CH and 194CH, but those modes are not fixture-verified.

26CH	Fixture-verified: Y-axis movement, focus, main light and auxiliary effect control
38CH / 62CH / 74CH	Manual-listed only; verify the actual unit and fixture profile before use
194CH	Extended manual-listed mode; must not be labelled fixture-verified

COMMISSIONING

Secure the fixture and safety cable; verify the nameplate, earth and cabling; connect power and DMX; select a confirmed mode and start address; then test Y-axis, focus, twelve RGBW cells, 144 RGB auxiliary pixels, wash and strobe.

DMX authority: the XML internal instance patch is not a publishable 41CH mode; only the fixture-verified 26CH mode is published.

